



## MANUTENTION

	Dimension	TT / TL	PR	Indice	Profil
<b>5</b>	<b>23x5</b>	TT	6	113 B	FL-07
<b>8</b>	<b>4.00-8</b>	TT	6	90 A5	FL-01
		TT	6	90 A5	NB-44
		TT	10	97 A5	FL-03
	<b>5.00-8</b>	TT	8	106 A5	FL-01
		TT	8	106 A5	FL-03
	<b>16x6-8</b>	TT	16	113 A5	FL-01
<b>18x7-8</b>	TT	14	121 A5	FL-01	
<b>9</b>	<b>6.00-9</b>	TT	12	121 A5	FL-01
		TT	12	121 A5	FL-02
	<b>21x8-9</b>	TT	16	134 A5	FL-01
<b>10</b>	<b>6.50-10</b>	TT	12	125 A5	FL-01
		TT	12	125 A5	FL-02
	<b>23x9-10</b>	TT	18	139 A5	FL-01
<b>12</b>	<b>7.00-12</b>	TT	14	134 A5	FL-01
		TT	14	134 A5	FL-02
	<b>27x10-12</b>	TT	14	143 A5	FL-01
<b>15</b>	<b>7.50-15</b>	TT	16	146 A5	FL-01
	<b>8.15-15</b>	TT	14	146 A5	FL-01
	<b>8.25-15</b>	TT	14	149 A5	FL-06
		TT	18	153 A5	FL-01



FL-01



FL-02



FL-03 - NB-44



FL-06



FL-07